


# B1-CM2 and B1-CM22 Appearance

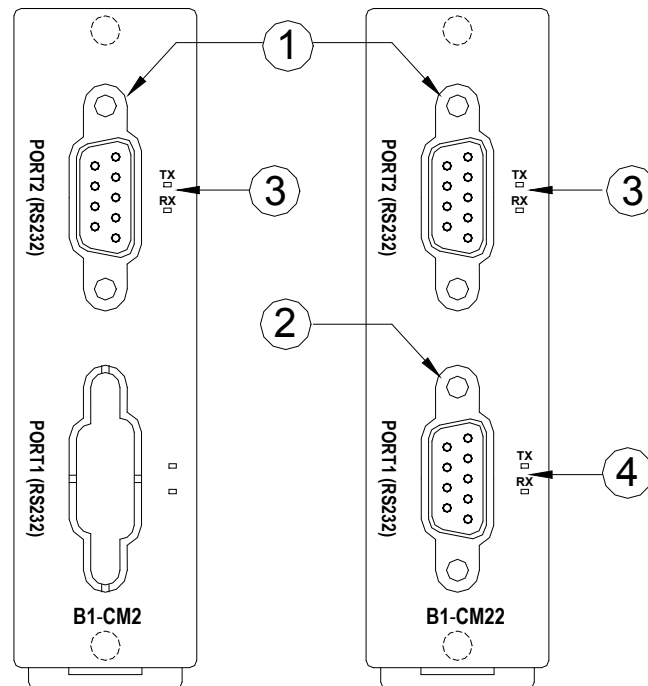

- ① Port2 connector : For RS232 signal.
- ② Port1 connector : For RS232 signal.
- ③ Port2 status indicator :
  - RX : ON indicates that Port 2 is receiving messages.
  - TX : ON indicates that the Port 2 is sending messages.
- ④ Port1 status indicator :
  - RX : ON indicates that Port 1 is receiving messages.
  - TX : ON indicates that the Port 1 is sending messages.